

andrewJames

Retro Kettle Popcorn Maker



Thank you for your purchase. We hope that you are satisfied with your new Andrew James product.

To fully and safely enjoy the benefits of your new product, please read the manual fully before use and keep safe for future reference.

Safety Information

When using any electrical appliance, basic safety precautions should always be followed, including the following;

- This appliance is intended for indoor, household use. Unintended use or operation may result in personal injury, damage to property or damage to the appliance that will void the warranty.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision and/or instruction concerning safe use of the appliance and the understanding of hazards. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years old and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years old.
- Never handle or operate any appliance with wet or moist hands.
- Do not immerse appliance, cord or plug in water or other liquids. Take care whilst cleaning.
- If the appliance has fallen in water do not reach for it, immediately switch the appliance off at the mains and unplug it.
- Ensure that the cord is not in a position where it can be pulled or tripped over accidentally. Never use the cord to carry or pull the appliance. Do not let the cord hang over the edge of a table or counter.
- Keep the cord away from heated surfaces.
- Do not use the appliance if it has malfunctioned, been dropped or damaged in anyway. If the unit has been damaged take the unit for examination and/or repair by an authorised service agent.
- Do not attempt to open the appliance, repair or modify the appliance, use the appliance for unintended applications or use accessory attachments not recommended by the

manufacturer. Failure to follow these instructions may result in fire, electrical shock, or risk of injury to persons.

- Do not place the appliance near a naked flame, hot gas or

electric burners, or any appliances generating heat.

- Always remove the plug safely from the socket after use. Do not pull from the cord.

Appliance Specific Safety Instructions

- Do not put any utensils in the appliance when it is in use.
- Do not place your hands inside the appliance when it is in use.
- Always operate the appliance on a flat level surface that is dry and heat resistant.
- When opening and cleaning the lid, always use an oven mitt to avoid potential risks of burning.
- Always unplug the appliance when it is not in use, when removing parts and before cleaning.
- Do not force the centre piece out of the brackets as the appliances gears will not line up correctly.

Before First Use

1. Remove all packaging and plastic bags from the appliance. Ensure that all packaging is removed from the chamber of the centre piece.
2. Clean all parts of the appliance before use as instructed in the section "Cleaning and Maintenance".
3. Position the appliance on a flat, dry and stable work surface.
4. Wear oven gloves when opening and closing the door of the appliance as contents will be hot.

Please note: During initial use the appliance may emit a little smoke and produce a slight odour, this is normal and is due to the burning off of residues left on during the manufacturing process.

Appliance Components Illustration



1. ON/OFF Button	3. Electrical Cord	5. Centre Piece
2. Light ON/OFF Button	4. Tray	6. Door Handle

How to Use

1. Ensure that all parts of the appliance are connected properly. This includes the centre piece being correctly attached to the brackets and the electrical cord being correctly inserted into the centre piece. Place the tray in the bottom of the appliance to collect the popcorn.
2. Also be aware to remove any foreign objects from the appliance.
3. Turn the appliance on by plugging the appliance in and flipping the “On/Off” switch to the “On” position.
4. Allow the appliances centre piece to heat up (approx. 3-5 minutes).
5. Turn the appliance off.
6. Using the small measuring spoon add 1 spoonful of vegetable oil into the centre piece by lifting the flap up by the plastic handle. Please ensure that
7. Add one large measuring scoop full of popcorn kernels into the centre piece.

8. Turn the appliance back on and close the door.
9. Keep the door closed during operation.
10. The popcorn will then begin to pop. Once the popping has stopped, tip the centre piece so that the popcorn is collected in the tray.
11. To make traditional tasting flavoured popcorn simply add extra ingredients such as sugar, salt or butter to the popcorn kernels whilst they are popping.
Please note: If you wish to make more than one cycle of popcorn, add a further spoonful of oil to the main body of the appliance for every cycle. Follow the instructions 6-8.
11. Turn the appliance off and unplug it from the mains supply.

Cleaning and Maintenance

- Always allow a cooling period to occur after using the appliance and before cleaning the appliance.
- Remove the handle from the centre piece by screwing it in an anti-clockwise direction.
- Remove the centre piece from the brackets by lifting it up and pulling it towards yourself carefully.
- Clean the insides of the popcorn maker with a damp wet cloth and dry. DO NOT IMMERSSE THE UNIT IN WATER OR LIQUID.
- Let the centre piece rest for 15-20 minutes to ensure it has cooled before attempting to clean out the grease.
- Empty the centre piece of any remaining oil and clean it with a non abrasive sponge.
- The appliance and parts of the appliance are not dishwasher safe.
- Store the appliance in a clean dry place.

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this

product is only for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to see our returns policy please go to:

www.andrewjamesworldwide.com

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

To return your item for a full refund, you have the right to do so within the first 30 days. All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

Electrical Information

Always ensure the voltage on the rating label corresponds to the power supply where the product is being used.

WARNING! This product must be connected to an earthed electrical power supply. The green/yellow conductor in the supply cord must be connected to the Earth terminal in the plug. The power supply must have an Earth connection.

Precautions should be followed for safe cable management and connection to the power supply

If a new mains plug needs to be fitted follow the fitting instructions supplied with good quality BS1363A plugs. If in doubt consult a qualified electrician or appliance repair agent.

- Safely dispose of the old plug.

- Connect the brown lead to the live terminal "L" in the new plug.
- Connect the blue lead to the neutral "N" terminal.
- Connect the green/yellow lead to the earth "E" terminal.

Recommended fuse: 13A

If an extension cable is required, it must have an earth conductor. To avoid overheating the extension cable should be rated no less than 13A and be fully unwound before use.

Do not attempt to modify electrical plugs or sockets or attempt to make an alternative connection to the electrical supply.

Disposal of the Appliance

Waste Electrical & Electronic Equipment (WEEE) Waste & Recycling



Disposal of Electrical and Electronic Waste

Non-household waste. This product must not be disposed of together with ordinary household waste.

Separate collection of used products, batteries and packaging allows the recovery and recycling of materials. Re-use of materials helps prevent environmental pollution and reduces the demand for raw materials.

Local authorities, retailers and collection organisations may provide for separate collection of electrical products, batteries and packaging.

Contact Details

Address: Andrew James UK Ltd, Lighthouse View, Spectrum Business Park,
Seaham, Durham, SR7 7PR, UK

Customer Service Telephone: 0191 377 8358

Email: customerservices@andrewjamesworldwide.com

Twitter: @andrewjamesltd

Facebook: Andrew James

Copyright Andrew James

AJ000629 | 08/2018

www.andrewjamesworldwide.com