

andrew James

19cm Food Slicer



Pour la version française veuillez consulter notre site de web
www.andrewjamesworldwide.com

Die deutsche Version finden Sie auf unsere Webseite
www.andrewjamesworldwide.com

Please read the manual fully before using the appliance and keep the
manual safe for future reference.



@andrewjamesltd

General Safety instructions

When using any electrical appliance, basic safety precautions should always be followed, including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8

years old.

- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.

- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be pulled or tripped over accidentally.
- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.
- Always operate the appliance on a smooth, even and stable surface. Do not place the unit on a hot

surface.

 
- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the appliance with wet hands.

Appliance specific safety instructions

- Make sure the appliance is cleaned after each use.
- The appliance should not be used to cut frozen food or food containing bones.
- When operating the appliance, make sure to use the carriage and food press in the correct manner. You should never come in contact with the blade when the unit is in use.
- Never try to hold/stop the appliance while it is in use.

- This appliance is constructed for short term domestic use (10 minutes maximum). After 10 minutes of continuous use the appliance must be allowed to rest for at least 10 minutes, before using the appliance again.
- ATTENTION: Never remove the food press from the unit during operation or when the power cord is still plugged in. This part acts as a shield for the user.
- ATTENTION: The blade will continue to revolve briefly after the unit is turned off.
- Do not use the appliance outdoors. Always keep it in a dry environment.

Appliance components diagram

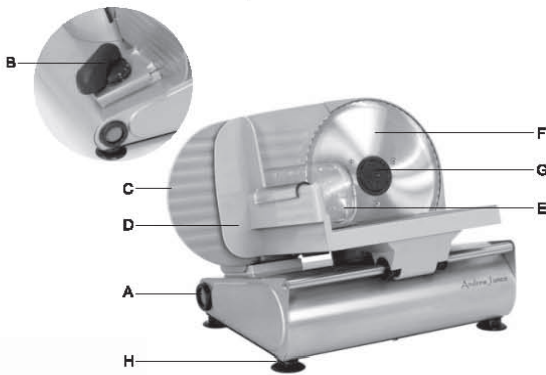

A. Power switch

B. Regulation knob for slice thickness

C. Support wing

D. Carriage

E. Food press

F. Blade

G. Locking screw

H. Feet with suction cup

Unit Features

This unit is supplied with a universal blade, which is suitable for hams, cheese etc.

Operating the appliance

- Before using it for the first time, carefully wipe down all parts of the appliance.
- Place the appliance on a flat and stable surface and make sure the suction cups of the feet adhere to the surface (H).
- Plug the appliance into the mains socket. Check first that the electrical voltage is the same as the appliance, details of this can be found on the label on the base of the unit. Your unit is now ready to use.
- For precise slicing turn the regulation knob to the "0" position and then turn it to your required thickness setting (B).
- Lay the intended item to be sliced on the carriage (D) and switch on the machine by pressing the power switch (A) to start the unit.
- Use the food press to grip the food and slide the carriage with an even motion over the blade. Never push the food (to be cut) hard against the blade. Gentle pressure will give the best results.
- The food press (which also acts to protect your fingers) should be used at all times.
- To avoid "sticking" when cutting very

thin slices, it is suggested to slightly dampen the blade first with a cloth (always make sure the unit is turned off before doing this). This will help the slicer move faster and more smoothly.

- This appliance should not be used to slice meats with bones inside, frozen foods, items with large seeds inside or items still in packaging (fresh wrap or aluminium foil, for example).
- The appliance should not be used for more than 10 minutes at a time.

Changing the blade

- Remove the blade locking screw (with a coin, for example) and carefully remove the blade.
- When replacing the blade, make sure that it is correctly in position before replacing the lock screw.

ATTENTION: The blades are very sharp. Make sure to always take care when handling or cleaning the blades.

Cleaning

- Unplug the unit from the power socket.
- Set the regulation knob of the cutting width back to the "0" position after each use.
- Use a damp cloth or sponge to wipe the appliance down.

- Never use abrasive materials, which could scratch the surface of the appliance.
- Be sure the appliance is completely dry before storing.

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as a proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is for domestic use only not commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for

the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to our website:

www.andrewjamesworldwide.com

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU. All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

Electrical Information

Always ensure the voltage on the rating label corresponds to the power supply where the product is being used.

WARNING! This product must be connected to an earthed electrical power supply. The green/yellow conductor in the supply cord must be connected to the Earth terminal in the plug. The power supply must have an Earth con-

nection.

Precautions should be followed for safe cable management and connection to the power supply

If a new mains plug needs to be fitted follow the fitting instructions supplied with good quality BS1363A plugs. If in doubt consult a qualified electrician or appliance repair agent.

- Safely dispose of the old plug.
- Connect the brown lead to the live terminal "L" in the new plug.
- Connect the blue lead to the neutral "N" terminal.
- Connect the green/yellow lead to the earth "E" terminal.

Recommended fuse: 13 A.

If an extension cable is required, it must have an earth conductor. To avoid overheating the extension cable should be rated no less than 13A and be fully unwound before use.

Do not attempt to modify electrical plugs or sockets or attempt to make an alternative connection to the electrical supply.

Disposal of the appliance

Waste Electrical & Electronic Equipment (WEEE) Waste & Recycling



Disposal of Electrical and Electronic Waste

Non-household waste. This product must not be disposed of together with ordinary household waste.

Separate collection of used products, batteries and packaging allows the recovery and recycling of materials. Re-use of materials helps prevent environmental pollution and reduces the demand for raw materials.

Local authorities, retailers and collection organisations may provide for separate collection of electrical products, batteries and packaging.

Contact details

Andrew James UK LTD

Unit 1

P C Henderson Premises

Bowburn North Industrial Estate

Bowburn

Co Durham

DH6 5NG

Customer Service / Technical Support

Telephone: 0844 335 8464

Email: customerservices@andrewjamesworldwide.com

Web:

www.andrewjamesworldwide.com

Twitter: @andrewjamesltd

Facebook: Andrew James

Copyright Andrew James

Pour la version française de ce notice veuillez visiter notre site:

www.andrewjamesworldwide.com

Bitte finden Sie die deutsche Version dieser Bedienungsanleitung auf unserer **www.andrewjamesworldwide.com**

AJ000034 / AJ000339 / AJ000340

09/2016