

andrew James

Compact Mini Chopper



Please read the manual fully before using the appliance and keep the manual safe for future reference.

General Safety Information

When using any electrical appliance, basic safety precautions should always be followed, including:

- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children less than 8 years old.
- Always ensure the voltage on the rating label corresponds to the voltage in your home.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre. If in doubt please contact our customer service team.
- The appliance is intended for domestic use only. Industrial or commercial use will void the warranty. The supplier cannot be held responsible for injury or damage if the appliance has been used for anything other than its intended use.
- Incorrect operation and use can damage the appliance and cause injury to the user.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit has been damaged take the unit for examination and or repair by an authorised service agent.
- Do not immerse or expose the motor assembly, plug or the power cord in water or any other liquid for any reason.
- If the supply cord is damaged, it must be replaced by the manufacturer or by someone who is suitably qualified to avoid a potential hazard.
- Do not let the cord hang over the edge of a table or counter. Ensure that the cord is not in a position where it can be

pulled or tripped over accidentally.

- Do not allow the cord to touch hot surfaces and do not place the cord near hot gas, electric burners or in a heated oven.
- Use of an extension cord with this appliance is not recommended. However if it is necessary to use an extension cord, ensure that the extension cord is equal to or greater than the power consumption of the appliance to avoid overheating of the appliance and extension cord. Do not use any other appliance on the extension cord. Do not place the extension cord in a position where it can be pulled on by children or animals or be tripped over.
- Always operate the appliance on a smooth, even and stable surface. Do not place the unit on a hot surface.
- Always remove the plug of the appliance safely. Do not pull on the appliances cord to remove the appliance plug from the electrical socket.
- Never handle or operate the

appliance with wet hands.

- Under no circumstances is this product to be hard wired into an electrical ring main.

Appliance Specific Safety Instructions

- Never put your hand into the bowl when the machine is operating.
- The blade is very sharp, take great care when cleaning the appliance.

Directions for Use

Only use this product with wet ingredients. It is not recommended that you use this for dry ingredients such as coffee beans.

The maximum capacity is 200ml or 200g of food. Only use vegetables that are 1/2cm wide.

To operate the Mini Chopper, lock the lid in place by placing it in the grooves and turning it to the right until it locks. If it does not lock, the appliance will not operate. Hold down the on switch to begin operation. Please note, the maximum amount of time you can operate this for without a break is one minute.

Care and Cleaning

- The blade is dishwasher safe, but it is not recommended that you clean the bowl in the dishwasher.

- Handle the blades with extreme care, they are incredibly sharp.
- Some food might discolour the appliance, this is normal and won't harm the appliance or effect the flavour of your food.
- To clean the power unit, wipe it with a damp cloth and then dry.
- For the rest of the product, clean them by hand in warm soapy water.

UK and EU Guarantee

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the original receipt of sale/order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to:

www.andrewjamesworldwide.com

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

Electrical Information

Always ensure the voltage on the rating label corresponds to the power supply where the product is being used.

Class II double insulation. This tool is double insulated therefore no earth connection is required.



Precautions should be followed for safe cable management and connection to the power supply

If a new mains plug needs to be fitted follow the fitting instructions supplied with good quality BS1363A plugs. If in doubt consult a qualified electrician or appliance repair agent.

- Safely dispose of the old plug.
- Connect the brown lead to the live terminal "L" in the new plug.

- Connect the blue lead to the neutral “N” terminal.

Warning! For double insulated product no connection is made to the Earth terminal.

Recommended fuse: 13 A.

If an extension cable is required, a 2 core or 3 core (earthed) extension can be used. To avoid overheating the extension cable should be rated no less than 13A and be fully unwound before use.

Do not attempt to modify electrical plugs or sockets or attempt to make an alternative connection to the electrical supply.

Disposal of the Appliance

Waste Electrical & Electronic Equipment (WEEE) Waste & Recycling



Disposal of Electrical and Electronic Waste

Non-household waste. This product must not be disposed of together with ordinary household waste.

Separate collection of used products, batteries and packaging allows the recovery and recycling of materials. Re-use of materials helps prevent environmental pollution and reduces the demand for raw materials.

Local authorities, retailers and collection organisations may provide for separate collection of electrical products, batteries and packaging.

Contact Information

Address: Andrew James UK Ltd, Lighthouse View, Spectrum Business Park, Seaham, Durham, SR7 7PR, UK

Customer Service Telephone: 0191 377 8358

Email: customerservices@andrewjamesworldwide.com

Twitter: @andrewjamesltd

Facebook: Andrew James

Copyright Andrew James

AJ001272 | 07/2018

www.andrewjamesworldwide.com