

# andrew James

## Citrus Juicer



Thank you for your purchase. We hope that you are satisfied with your new Andrew James product.

To fully and safely enjoy the benefits of your new product, please read the manual fully before use and keep safe for future reference.

## General Safety

When using any electrical appliance, basic safety precautions should always be followed, including the following;

- This appliance is intended for indoor, household use. Unintended use or operation may result in personal injury, damage to property or damage to the appliance that will void the warranty.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision and/or instruction concerning safe use of the appliance and the understanding of hazards. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 years old and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years old.
- Never handle or operate any appliance with wet or moist hands.
- Do not immerse appliance, cord or plug in water or other liquids. Take care whilst cleaning.
- If the appliance has fallen in water do not reach for it, immediately switch the appliance off at the mains and unplug it.
- Ensure that the cord is not in a position where it can be pulled or tripped over accidentally. Never use the cord to carry or pull the appliance.
- Keep cord away from heated surfaces.
- Do not use the appliance if it has malfunctioned, been dropped or damaged in anyway. If the unit has been damaged take the unit for examination and/or repair by an authorised service agent.
- Do not attempt to open the appliance, repair or modify the appliance, use the appliance for unintended applications or use accessory attachments not

recommended by the manufacturer. Failure to follow these instructions may result in fire, electrical shock, or risk of injury to persons.

- Do not place the appliance near a naked flame, hot gas or electric burners, or any appliances generating heat.
- Always remove plug safely from socket after use. Do not pull from cord.

### Appliance Specific Safety

- This appliance is to be used for soft fruits only, such as oranges and lemons. The use of hard fruits may damage the appliance.
- Switch the appliance off at the mains and remove the plug when cleaning and/or after use.
- If the turning blades are not working correctly, switch the appliance off at the mains and remove the plug from socket. If in doubt, consult a qualified service agent

### Rated Run Time (RRT)

**CAUTION:** Do not exceed the Rated Run Time. If excessive pressure is applied the motor and drive system may be damaged

Electrical appliances intended for food preparation are designed with sealed enclosures or with small openings in the enclosure to prevent contamination.

- The lack of openings in the enclosure restricts airflow and increases the internal operating temperatures. A Rated Run Time (RRT) is stated to prevent overheating and potential damage.
- The RRT marked on the rating label is 15s.
- The rest period between juicing activities is 15s
- Periods of continuous use should not exceed 1 minute

Voltage (V)	230
Power (W)	40
Frequency (Hz)	50
Capacity (L)	1.0

## Electrical Safety Information

Always ensure the voltage on the rating label corresponds to the power supply where the product is being used.

Class II double insulation.

This appliance is double



insulated therefore no earth connection is required.

- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by a qualified electrician or a service repair centre.
  - Precautions should be followed for safe cable management and connection to the power supply
  - If a new mains plug needs to be fitted follow the fitting instructions supplied with good quality BS1363A plugs. If in doubt consult a qualified electrician or appliance repair agent.
- a) Remove and safely dispose of the old plug.
- b) Connect the brown lead to


the live terminal “L” in the new plug.

c) Connect the blue lead to the neutral “N” terminal.

d) Recommended fuse: 3 A.

- **Warning!** For double insulated product no connection is made to the Earth terminal.
- Use of an extension cable is not recommended. If an extension cable is required, it should be rated no less than 13A and be fully unwound before use to avoid overheating. Do not connect multiple appliances to the extension cable
- Do not attempt to modify electrical plugs or sockets or attempt to make an alternative connection to the electrical supply.

## Appliance Overview and Operation

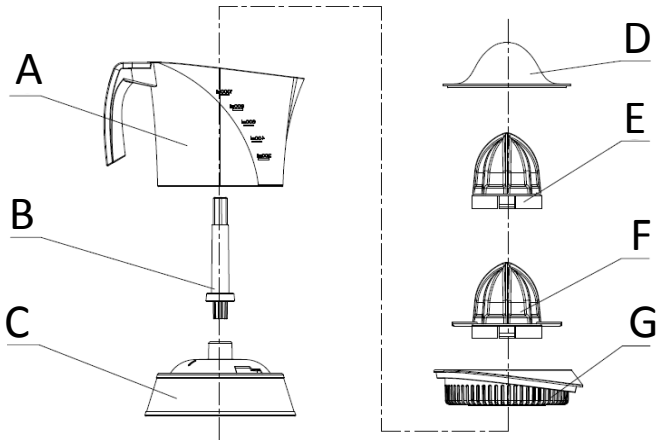

A. Juice Bowl	E. Big Cone
B. Drive Shaft	F. Small Cone
C. Base with Cord Storage	G. Filter
D. Dust Cover	

### Before First Time Use

- Clean all removable parts of the appliance thoroughly in warm, soapy water. Rinse with clean water and dry.

### Assembling the Appliance

- Place the base (c) on a flat, level surface.
- Grab the juice bowl (a) and slot through the drive shaft (b). Rotate the jug clockwise until the alignment arrows match and locked to the base.
- Place the small cone (f) onto the drive shaft above the filter and push down to secure.
- Place the large cone (e) on top of the small cone when juicing larger fruits such as oranges.

### Directions for Use

- To start the juicer, plug in the appliance at the wall and switch on at the mains. Remove the lid from the appliance and attach the relevant sized juice cone.
- **CAUTION:** There is no ON/OFF switch for the appliance, the unit will operate when the drive shaft is depressed.
- Slice the fruit into halves and place firmly on the juice cone. Hold on to the handle of the Citrus Juicer to ensure stability. Push down firmly on the fruit, this will activate the drive shaft motor. **Note:** The cone will change rotations if the pressure on the fruit is removed and re-applied.

- Do not overload or exceed the Rated Run Time.
- Once you have finished juicing, hold the handle of the bowl and turn anti-clockwise to unlock. Serve and enjoy your freshly pressed juice.

### **Cleaning and Maintenance**

- Always unplug and allow the appliance to cool before cleaning.
- Clean the removable parts in hot, soapy water and rinse under a running tap. Never use metal polish for cleaning.
- Use a damp cloth to dry the base. Do not immerse the base in water or any other liquid.
- The filter, juice cones and dust cover are dishwasher safe. Please take reasonable care washing all other components.

### **UK and EU Guarantee**

Your new Andrew James product comes with a 24 month guarantee and a 2 year fixed warranty, effective from receipt confirmation. Your receipt or order number is required as proof of purchase date so it is imperative that you keep it safe. This guarantee only applies if the item has been used solely for the use intended, and all instructions have been followed accordingly. Please note this product is only for domestic use only and is not for commercial use.

Abuse of your product will invalidate the guarantee. Returned goods can only be accepted if repackaged properly within the original colour product box, and presented with the

original receipt of sale / order number. This does not affect your statutory rights.

Returned products must be cleaned and returned to us in as close to delivery condition as possible.

If your product develops a problem within the first 12 months of the fixed warranty, we will pay all shipping costs to have it returned to us. After 12 months the customer will be liable for the cost of returning the product to us. We will then pay to have the repaired/replaced item shipped back to the customer.

If you wish to return your item for a full refund, you have the right to do so within the first 7 days. For our returns policy please go to:

**[www.andrewjamesworldwide.com](http://www.andrewjamesworldwide.com)**

Customers are responsible for any taxes applied to our products when they are shipped outside of the EU.

All of our prices are inclusive of VAT.

Once a product has been returned to us, we will aim to repair or replace it within 30 days of receipt.

The guarantee does not cover any defect arising from improper use, damage, build-up of lime scale or repair attempts made by third-parties. Also, the guarantee does not cover normal wear and tear of individual parts.

## Disposal of the Appliance

### Waste Electrical & Electronic Equipment (WEEE) Waste & Recycling



### Disposal of Electrical and Electronic Waste

Non-household waste. This product must not be disposed of together with ordinary household waste.

Separate collection of used products, batteries and packaging allows the recovery and recycling of materials. Reuse of materials helps prevent environmental pollution and reduces the demand for raw materials.

Local authorities, retailers and collection organisations may provide for separate collection of electrical products, batteries and packaging.

## Contact Information

**Address:** Andrew James UK Ltd, 2 Lighthouse View, Spectrum Business Park,  
Seaham, Co. Durham, SR7 7PR, UK

**Customer Service Telephone Number:** 0191 377 8358

**Email:** [customerservice@andrewjamesworldwide.com](mailto:customerservice@andrewjamesworldwide.com)

**Twitter:** @andrewjamesltd

**Facebook:** Andrew James

Copyright Andrew James

AJ001528 | 06-2018

[www.andrewjamesworldwide.com](http://www.andrewjamesworldwide.com)